



# Glide Series

10.95" 5G Tablet



## WHAT'S IN THE BOX

Tablet · Power Adapter · Type-C Cable · Rechargeable USB-C Active Stylus · SIM Ejection Pin · Cleaning Cloth

## CONTENTS

# Everything you need to get started

 
---

1. Brief introduction for COSMIQ Glide Series Android Tablet	2
1.1 Diagram for COSMIQ Glide Series Tablet	2
1.2 Functional diagram	2
1.3 Included accessories	2
2. Quick start	3
2.1 Key function	3
2.2 Homepage interface	3
2.3 Access to application program	3
2.4 Character input	4
3. Connection Establishment	6
3.1 WIFI connection	6
3.2 Bluetooth Connection	7
3.3 Call Function	8
3.4 Network Connection	8
4. Connect the device to computer	10
5. Troubleshooting	12
6. COSMIQ Active Stylus Pen	13

## 1.1 Diagram for COSMIQ Glide Series Tablet



## 1.2 Functional Diagram

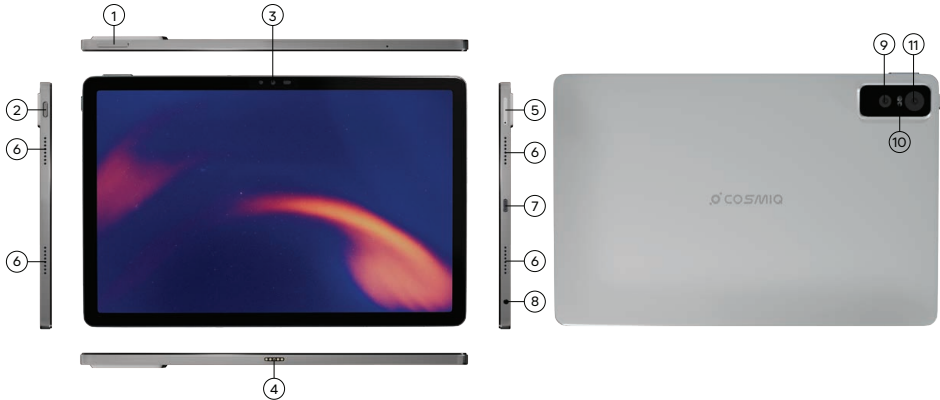

① Volume+/-

④ POGO Pin Port

⑦ Type-C port

⑩ Flashlight

② Power key

⑤ SIM/TF Card slot

⑧ Headphone jack

⑪ Rear Camera

③ Front Camera

⑥ Speakers

⑨ Macro Camera

## 1.3 Included accessories

Except Tablet, the following accessories are included:

Power adaptor	x1	User's manual	x1	Cleaning Cloth	x1
Type-C cable	x1	Ejection Pin	x1	Flip cover (optional)	x1
Stylus Pen	x1				

### 2.1 Key Functions

Power Key	Press and hold the Power button to turn on the tablet. Long press power key to pop up shutdown option. Short press power key to lock the screen.
-----------	--------------------------------------------------------------------------------------------------------------------------------------------------------

Volume Key	Press to increase or decrease volume.
------------	---------------------------------------

### 2.2 Homepage interface

The main interface displays your wallpaper and frequently used apps. You can arrange apps Based on your preference and customize the wallpaper anytime. To change it, go to **Settings** → **Wallpaper**, then choose from Live Wallpapers, Photos, or Wallpapers to set your Home screen background.



Figure 2-1

### 2.3 Access to application program

1

Swipe Up

Swipe up on the home screen to open the app drawer.

## 2 Select the App

Tap the application program you want to open.

## 3 Exit the Program

Press the Back key to return to the previous screen, or the Home key to return to the home screen directly.

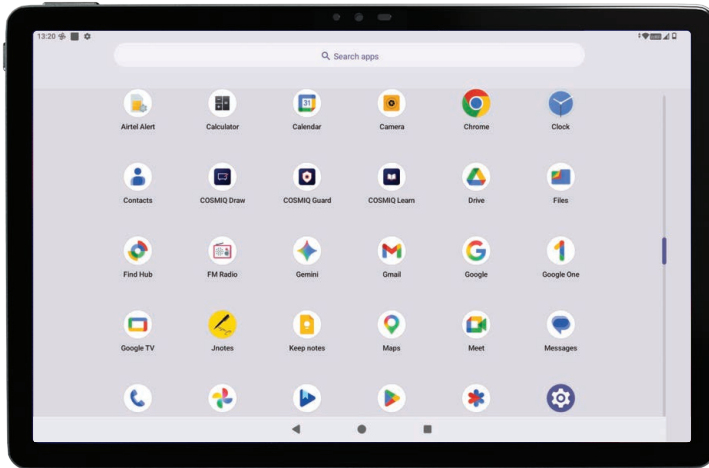 


Figure 2-2

## 2.4 Character input

Using the On-Screen Keyboard:

When you open a program or select a text field that requires input, the on-screen keyboard will automatically appear.

The following input methods are provided for the keyboard to select.

- ① Keyboard
- ② Third-party input methods (can be installed by the user)

Select the input method you want to use. The keyboard will appear automatically when you enter text.

**1**

### Open Settings

Press the menu key on the home screen, then tap settings and then click system.

**2**

### Language & Input

Tap Languages & Input. All installed input methods will be listed.

**3**

### Select Input Method

Tap the input method you want to use.

To switch input method while typing:

**1**

### Tap the Keyboard Icon

In the character input interface, tap the keyboard icon in the status bar until the editing text menu appears.

**2**

### Select Input Method

Choose the input method you need.

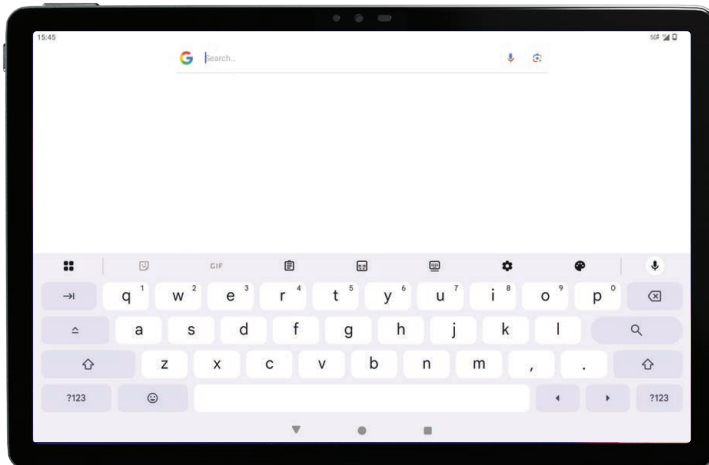 


Figure 2-3

## Keyboard Shortcuts



Switch input capital and small letters

?123

Switch number/symbol/graphic input mode

## 03 Connection Establishment

### 3.1 Wi-Fi Connection

1

#### Open Settings

Open the App drawer and tap Settings → Network & Internet.

2

#### Scan for Networks

After enabling Wi-Fi, the device will automatically scan and display available networks.

3

#### Connect

Select the network you want to connect to, enter the password, and then tap Connect.

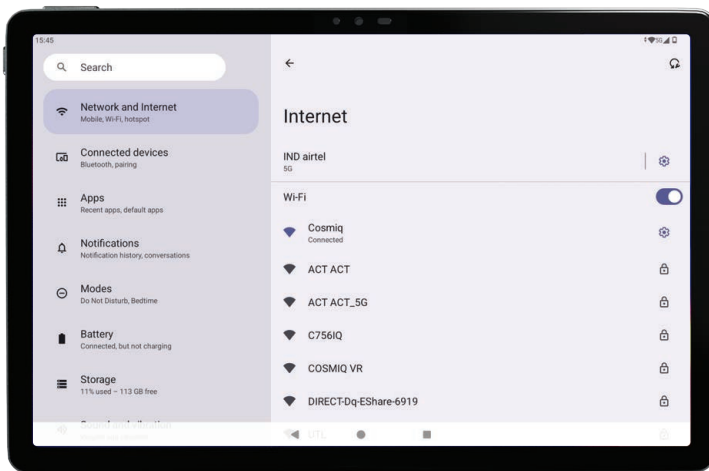 


Figure 3-1

## 3.2 Bluetooth Connection

1

### Open Bluetooth Settings

Go to Settings → Connected Devices and turn on Bluetooth.

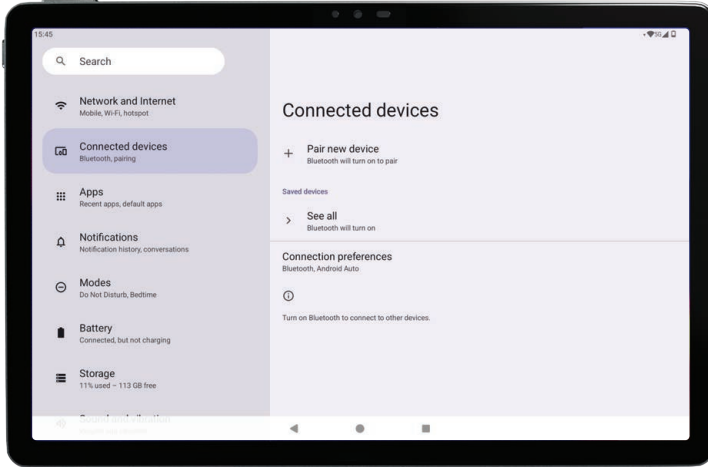 


Figure 3-2

2

### Pair New Device

Tap “Pair new device” then select the device you want to connect to.

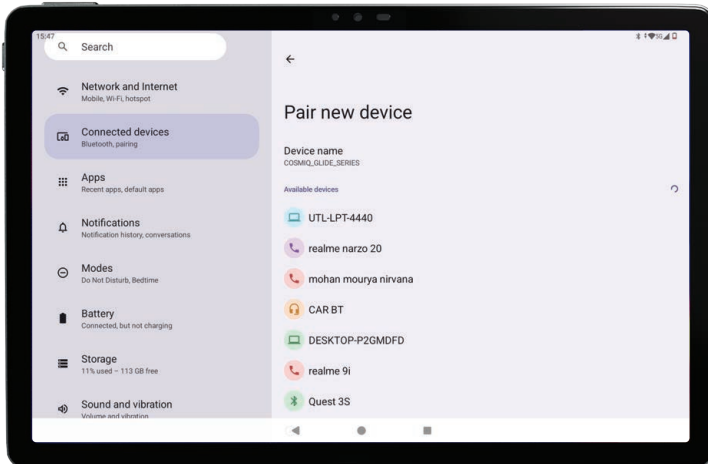 


Figure 3-3

### 3.3 Call Function

1. Insert the SIM card while the tablet is powered off, then turn it on.
2. Once the network signal appears, you can make or receive calls. Signal strength is shown in the top-right corner of status bar.

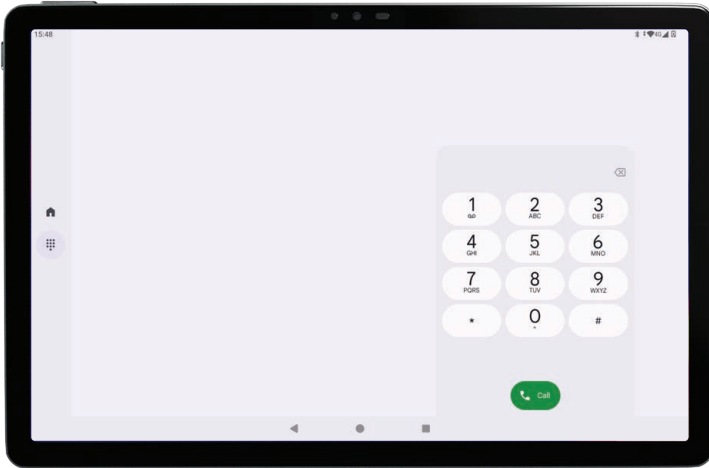 


Figure 3-5

### 3.4 Network Connection

Your tablet can connect to 4G & 5G networks after inserting a SIM card.

**1** **Open Settings**  
On the home screen, tap the Settings menu.

**2** **Network & Internet**  
Tap Network & Internet.

**3** **Mobile Network**  
Tap Mobile Network and turn on Mobile Data. You can now browse the web.

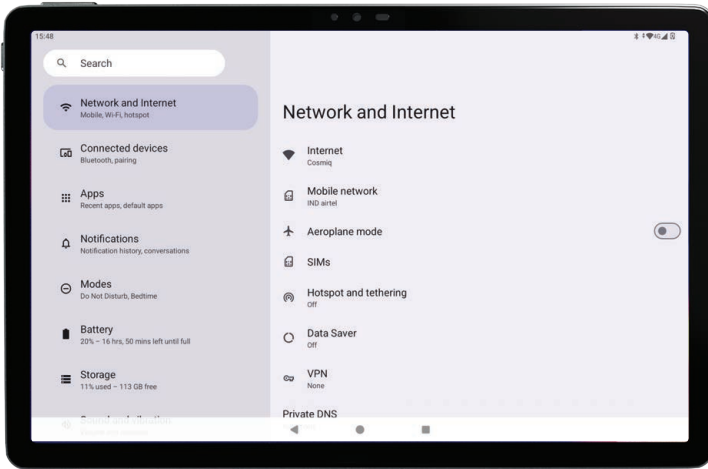 


Figure 3-6

## 4

### Quick Toggle

You can also pull down the menu at the top of the main interface to quickly toggle 4G & 5G on or off.

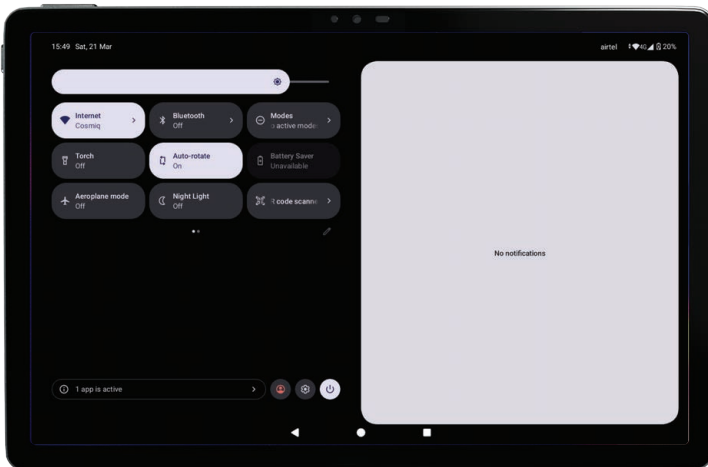 


Figure 3-7

## 04 Connect the device to computer

1

### Connect the Cable.

Connect the device to the computer with the Type-C cable.

2

### Open USB Options

Pull down the menu on the main interface. Select "USB charging this device", tap the down arrow, then tap "Tap for more options".

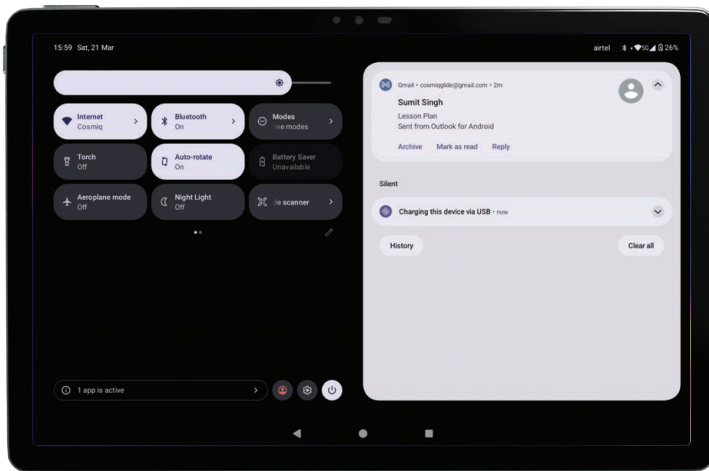 


Figure 4-1

3

### Select File Transfer.

Tap "File Transfer". You can now transfer files between the device and the computer.

### 3

#### Select File Transfer.

Tap "File Transfer". You can now transfer files between the device and the computer.

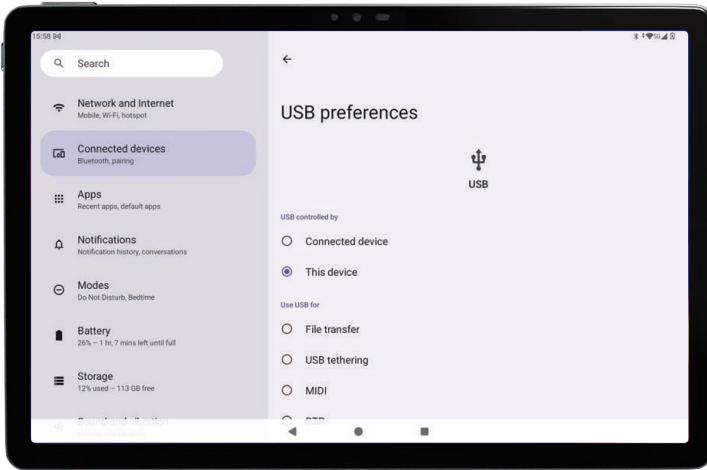 


Figure 4-2

### 5.1 Slow Initial Boot

After a system upgrade, the tablet needs to install pre-installed software applications on the first boot. This takes approximately 2–3 minutes. Boot speed returns to normal afterwards.

### 5.2 Cannot Connect to Wi-Fi

- Ensure the wireless router providing network services is working properly.
- Ensure the tablet and router are within range, with no walls or obstacles between them.
- Ensure the username and password are correct.

### 5.3 Tablet Feels Hot

This is normal when multiple applications are running at the same time, the screen brightness is at maximum, or the device is recharging.

### 5.4 System Is Disordered / Not Working Properly

Installation of some third-party applications may cause system failure. You can resolve this by resetting the system.

### 5.5 Unable to Create Email or Log into Applications

- Ensure your network is properly connected to the internet.
- Ensure your email settings are correct.
- Ensure your system time and local time are consistent.

**Description: Active Stylus Pen**

Item: US02

Length: 166mm Dia: 9.5mm

Voltage: 3.3–4.2V

Battery: Li-Battery

Charging Type: Type-C

Charging Time: About 60mins

Battery Saving Mode: 15mins automatic shutdown without work

 
**Features:**

Compatible with USI Protocol Tablets.

Tablets: Use the stylus to replace finger actions like tapping and swiping.

It also supports writing and drawing in specific apps.


- ① Active Touch
- ② Palm Rejection
- ③ 4096 Levels of Pressure Sensitivity
- ④ Replaceable Tip

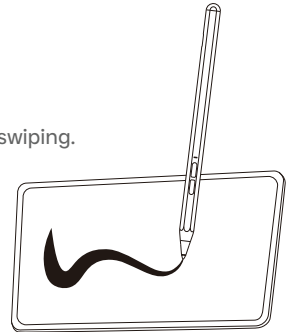**User Guide:**

Initial Use: Charge to activate.


Power On: Press the button. Light turns off after 30s, and writing function activates.

 Power Off: After 15 minutes of inactivity, the stylus powers off.

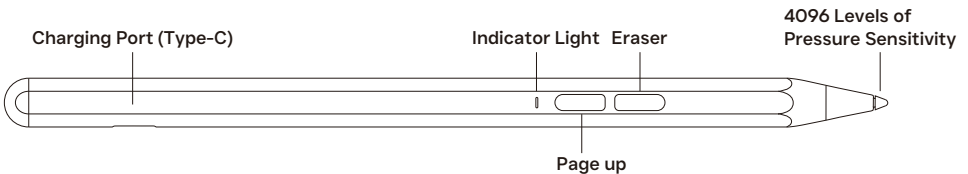

## Replaceable Tip

 Easily detachable tip design allows for quick replacement without worrying about wear. Simply plug and unplug to remove or install.

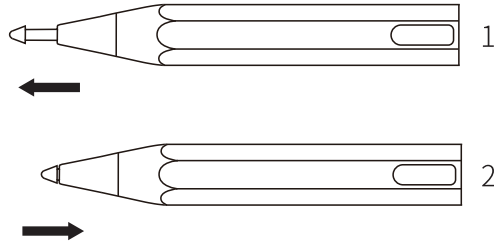

## Compatibility

USI Protocol Tablets.

## Warning

This product contains a battery. Do not dispose of it in fire or immerse it in water or other liquids, as this may cause explosion or damage due to short circuit.

## Disclaimer

The product specifications and information in this manual are for reference only and may change without prior notice.

We make no guarantees regarding the content. Due to technological advancements and operating system complexities, some information may not be applicable. We are not liable for any loss arising from errors or omissions.